



# Como configurar o driver TWAIN




Se estiver usando uma conexão USB

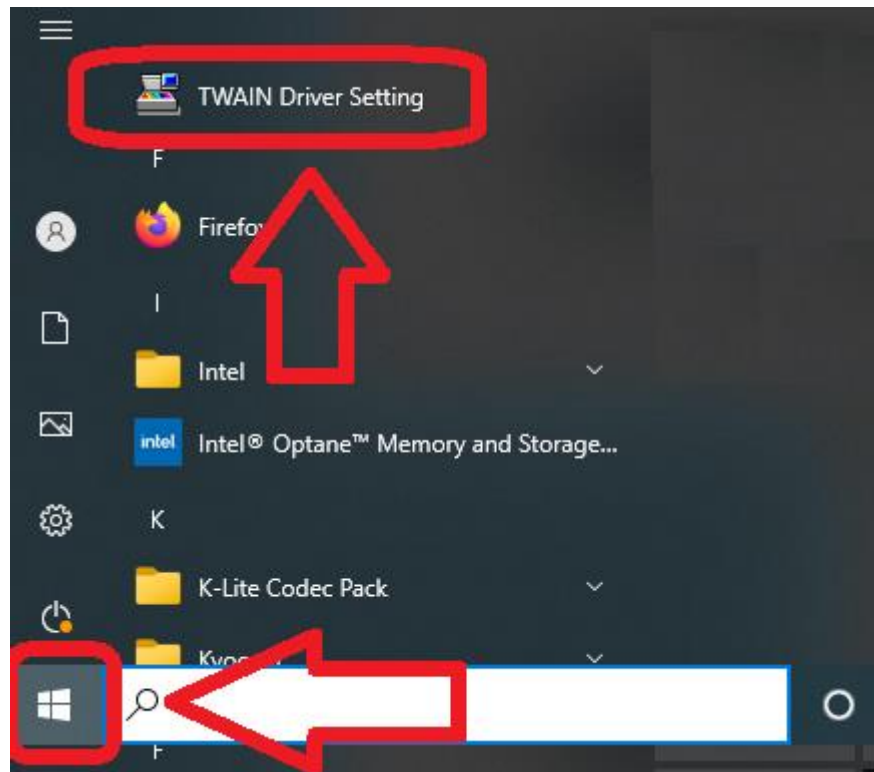

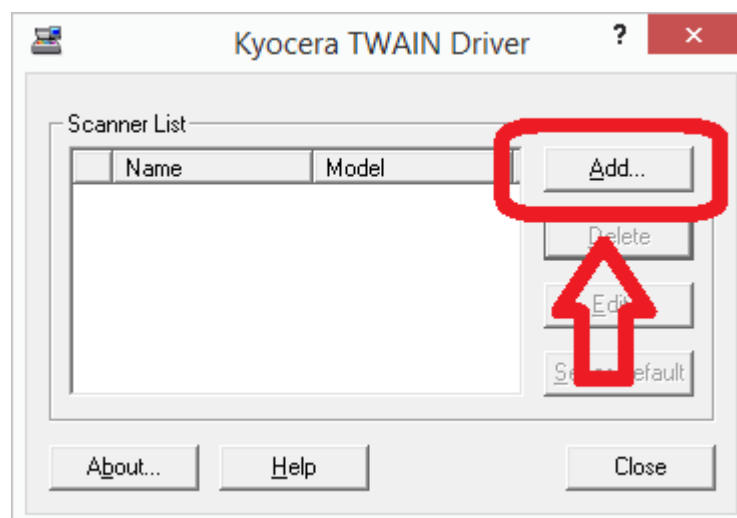

1. Select the *printer model (USB)* from the **Model** list
  - not / models
2. Input a suitable value into the **Name** field
3. Select **OK**

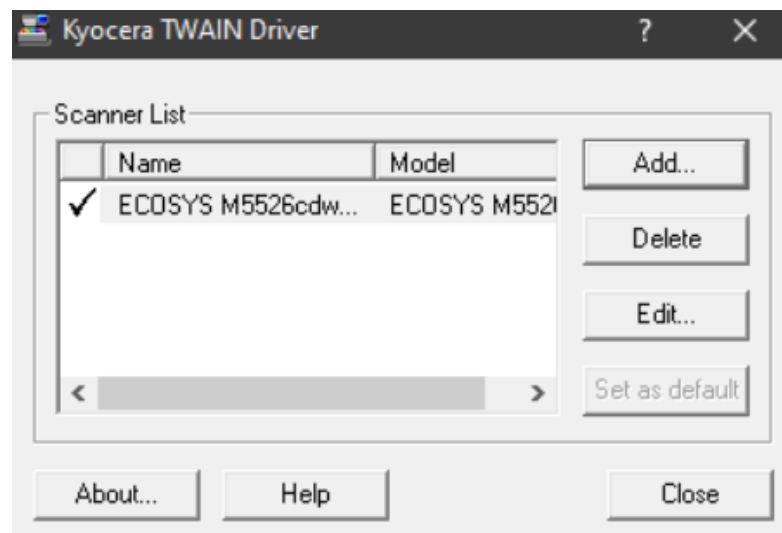

## Se estiver usando uma conexão de REDE

Kyocera TWAIN Driver

Name  
ECOSYS M5526cdw (Network)

Model  
ECOSYS M5526cdw

Unit  
 Inch  
 Metric

Scanner Address  
192.168.1.200

Image Compression(Color)  
 Yes  No

Compression Level  
3  
Low High

Image Compression(Gray / Monochrome)  
Compression Level  
3  
Low High

Secure Protocol Setting  
 SSL

User Authentication Settings

Help OK Cancel